

## WASHING SYSTEM

Your tipper is fitted with a pressure washing system, with a 120 litre tank on the inside of the chassis and a 15 metre hose:



Below we explain how it works:

### CONTROL PANEL



- 1 Air pressure key
- 2 Purging key (air-water)
- 3 Water in/out valve

### 1° Step: Tank filling



- Key 1 closed and key 2 open.
- Connect water filling hose and open key 3.
- Proceed with the water filling, until water starts coming out of the tank drainage pipe:



### 2° Step: Washing preparation



- Close key 3 and remove filling hose.
- Close key 2.
- Open key 1 to give pressure.

### 3° Step: Washing



- Connect the cleaning hose installed in the vehicle.
- Open key 3.
- Proceed to wash.

